


GSM Round Cutter - Dx

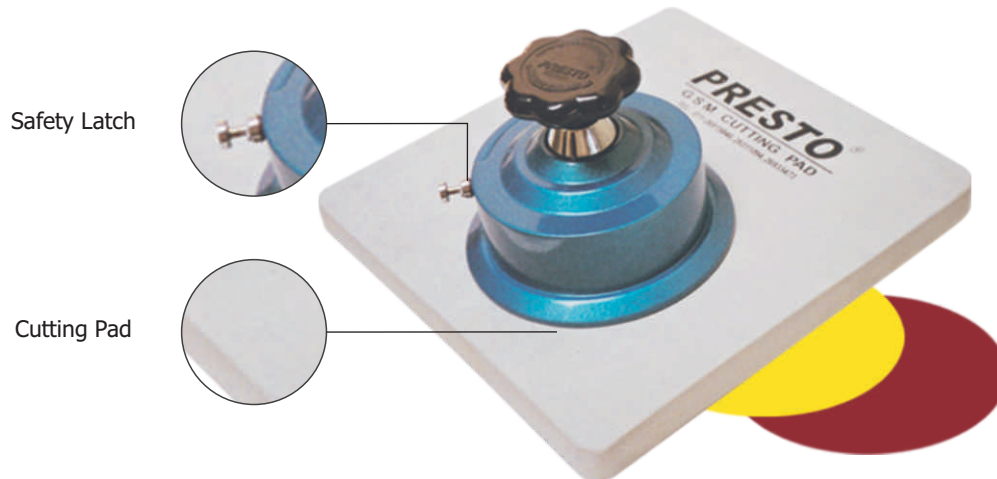


Model No. PRC - 101

GSM Round Cutter is a consistent tool useful for precise circular cutting of samples. Used to check the grammage of various sample. It cuts a sample with 100 sq. cm size rapidly and accurately.

Used in various Industries like paper and packaging, textile, films, foils etc.

- High Quality Aluminum pressure die casted main body
- Light weight and resilient
- Highly accurate test results
- Heavy Duty German Cutting Blades
- Available with Safety Latch Facility

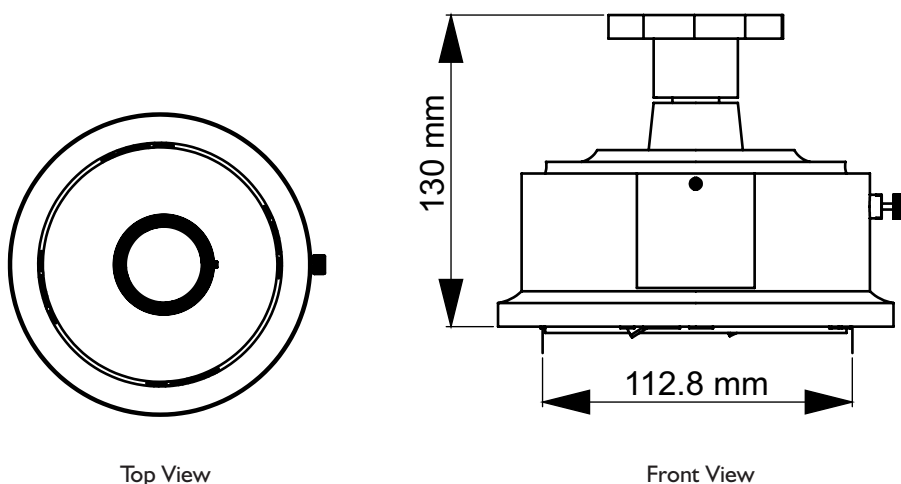

Key Specifications:

| | |
|--------------------|-------------------------|
| Sample Area | 100 sq.cm |
| Sample Diameter | 112.8 mm |
| Handle material | Bakelite |
| Movement of Handle | ¼ round to cut a sample |

Highlights:

| | |
|-----------------------|----------------------|
| No. of Blades | 4 |
| Safety Latch | Yes |
| Material of Main Body | Die casted Aluminum |
| Sample size | 100 sq.cm |
| Sample cutting pads | 2 (Both side usable) |

* Sample cutting thickness for paper & corrugated upto 4 mm.

Standard Accessories :

- Cutting pad pack of 2 nos. and Heavy Duty German Cutting Blades Pack of 4 nos.

Optional Features :

- Combine with Digital Weighing balance for a complete Grammage Checking Kit.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-



Head Office :

Presto Stantest Private Limited

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : +91 129 4272727 (100 Lines) E : info@prestogroup.com

• Faridabad • Kolkata • Mumbai • Pune • Ahmedabad • Chennai • Bangalore

www.prestogroup.com

